




Floor Tiling Made Easy

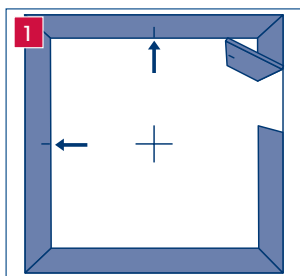


1 Determine the centre point of the room and mark it. Transfer these marks to the corresponding skirting boards.

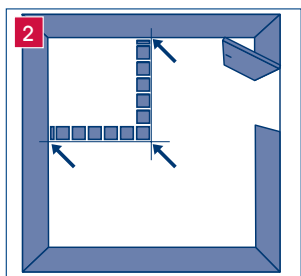

2 Starting at the centre mark, place a row of loose tiles along these lines. Cut tiles should be at least half a tile wide. If this is the case, position straight edges as per 4. Remember to leave room for TAL TILE SPACERS.

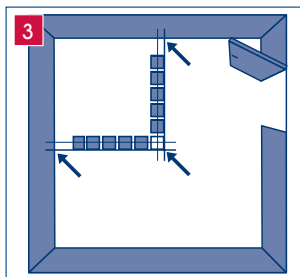

3 If cut tiles are too small, move the centre tile so that the middle of the tile coincides with the centre mark on the floor. Repositioning the tiles will now ensure correct cuts.

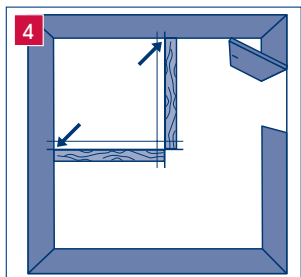

4 Mark the new starting point and transfer these marks to the corresponding skirting boards. Position straight edges on these marks in both directions.



5 Start at the centre of the room. Use the appropriate TAL ADHESIVE and with the straight edge of a TAL FLOOR TROWEL, spread the adhesive onto the floor.



6 In a horizontal direction, notch the adhesive with the TAL FLOOR TROWEL or TAL FLOOR APPLICATOR. Do not spread more adhesive than can be tiled onto in approximately 15 minutes.


Floor Tiling Made Easy




Use dry tiles. Butter the backs of heavily ribbed tiles. Bed the tiles firmly into the adhesive using a TAL RUBBER MALLET.




Use TAL TILE SPACERS to create uniform spacing. Remove before grouting. Never butt ceramic tiles hard up against each other.

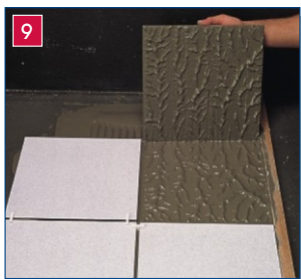

Lift the occasional tile to check for full coverage of adhesive on the back of the tile. No voids should occur underneath the tiles.

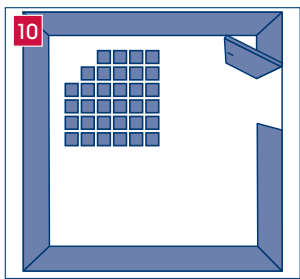

Tile out from the centre mark to the edges, keeping lines straight and tile spacing even. Leave cut tiles until last.

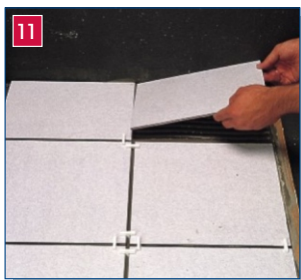

Measure and cut each tile to fill edges, leaving room for TAL TILE SPACERS. Butter back of tile with adhesive, place cut edge towards the wall and bed firmly into place using a TAL RUBBER MALLET.



Allow adhesive to dry before grouting. Use TAL WALL AND FLOOR GROUT or TAL QUARRYGROUT available in a variety of colours. Work grout well into joints with a TAL RUBBER SQUEEGEE.

Floor Tiling Made Easy



Remove the excess grout with a sponge. Allow the grout to dry and then polish with a dry cloth.



Provide movement joints in all corners and in large tiled areas approximately 5m apart internally and 3m apart externally. Rake out joints and leave ungrouted. Fill with flexible joint sealant (e.g. silicone).

Another Successful Installation Guaranteed

