


Wall Tiling Made Easy



1 Find the lowest point on the floor line and mark the wall one tile high from the floor at this point.

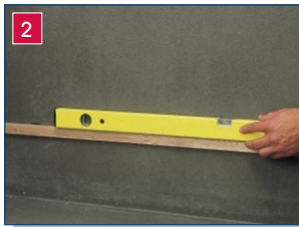

2 Nail a batten with a straight edge to the wall so that the top edge of the batten coincides with the mark. Ensure that the batten is horizontal, using a spirit level.



3 Set out a row of tiles across the wall over the batten and adjust so that equal cuts at least half a tile wide will be made in each corner. Mark the batten where the first tile will be placed. Remember to leave room for TAL TILE SPACERS.



4 Nail a vertical batten to the wall so that the inside edge of the batten coincides with the mark for the first tile. Check with a spirit level to ensure that the batten is perfectly vertical.



5 Use the appropriate TAL TILE ADHESIVE and commencing in this corner, spread the adhesive onto the wall with the straight edge of a TAL WALL TROWEL or TAL WALL APPLICATOR.



6 In a horizontal direction, notch the adhesive with the TAL WALL TROWEL or TAL WALL APPLICATOR. Do not spread more adhesive than can be tiled onto in approximately 15 minutes.

Wall Tiling Made Easy



Using dry tiles, begin in the corner of the battens placing tiles horizontally. TAL TILE SPACERS ensure even joints between tiles. Remove before grouting. Leave cut tiles until last.



Bed the tiles in firmly using a TAL RUBBER MALLET. Remove the occasional tile to check that good contact with the adhesive is being made.



Check tiling regularly with a spirit level to ensure that horizontal fixing is being maintained.



After adhesive has set, remove horizontal and vertical battens.



Measure and cut each tile required to fill in corners and bottom row, leaving room for TAL TILE SPACERS. Butter the back of the tile with adhesive, place cut edge into the corner and press firmly into place.



Allow adhesive to dry before grouting. Use TAL WALL AND FLOOR GROUT, available in a variety of colours. Work grout well into joints with a TAL RUBBER SQUEEGEE.

Wall Tiling Made Easy



Remove the excess grout with a sponge. Allow the grout to dry and then polish with a dry cloth.



Provide movement joints in all corners and in large tiled areas approximately 5m apart. Rake out joints and leave ungrouted. Fill with flexible joint sealant (e.g. silicone).

Another Successful Installation Guaranteed

