


HOW TO PRIME A SURFACE WITH BITUMEN ADHESIVE OR WATERPROOFING FOR TILE ADHESIVE APPLICATION

MAKING
TILING
EASY

The key to every successful tiling installation is correctly preparing the surface the tile has to adhere to. In most instances the surface will require priming. The function of a primer coat is to increase the bond of the adhesive to the surface as this will help to prevent the possibility of the tiles lifting later on. It will also enhance the water resistance and flexibility of the tiling installation.

STEP 1

Mechanically abrade the surface (chipping, grinding, scabbling, etc) to remove ALL traces of the bitumen. Ensure the surface is sound and suitable for tiling. (Balconies or showers can be waterproofed using TAL Superflex I or TAL Sureproof waterproofing compounds, which are fully compatible with tile adhesives.)

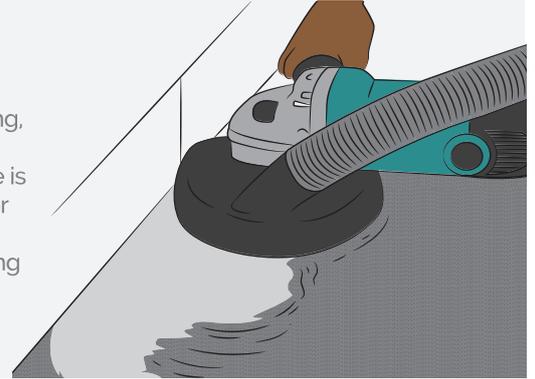

STEP 2 Clean the surface

Ensure the surface is clean and dry and free from surface contamination.



STEP 3 Mix



Mix Ratio

Mix 1 part TAL Keycoat to 2 parts TAL Keymix by volume



TAL Keymix



TAL Keycoat


STEP 4 Add Keymix

Add the Keymix to the TAL Keycoat liquid.



STEP 5 Mix Mechanical

Using a mechanical mixer, mix well. The slurry must have a smooth, paint-like consistency.

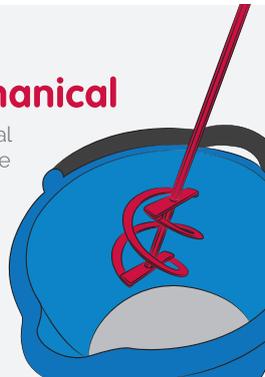

STEP 6 Apply to Surface

Using a builders block brush apply the slurry-mix to the surface, ensuring good coverage, ie. the slurry coat must fully cover the substrate




STEP 7 Dry

Allow the primed area to dry for 4-6 hours before commencing with tiling.



STEP 8 Test the Surface

Test that the surface is dry by pressing onto the surface. If there is no residue on your fingers, you are good to go.

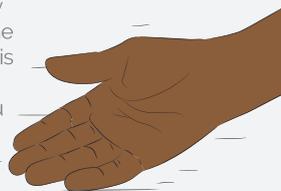

STEP 9 Commence Tiling



Need tiling advice?
Phone our TAL Technical Advice Centre:
0860 000 TAL(825)
www.tal.co.za

tal[®]
THE PROFESSIONAL CHOICE